 
 



Position ID	Spare part no.	Replacement	Description
0102	00496460		Plug
0109	00493906		Cable harness
0110	00432779		Holder
0111	00438026		Door latch
0112	00187205		Switch
0113	00424410		Switch
0121	00425565		Key
0122	00489674		Handle-strip
0123	00600071		Key
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions

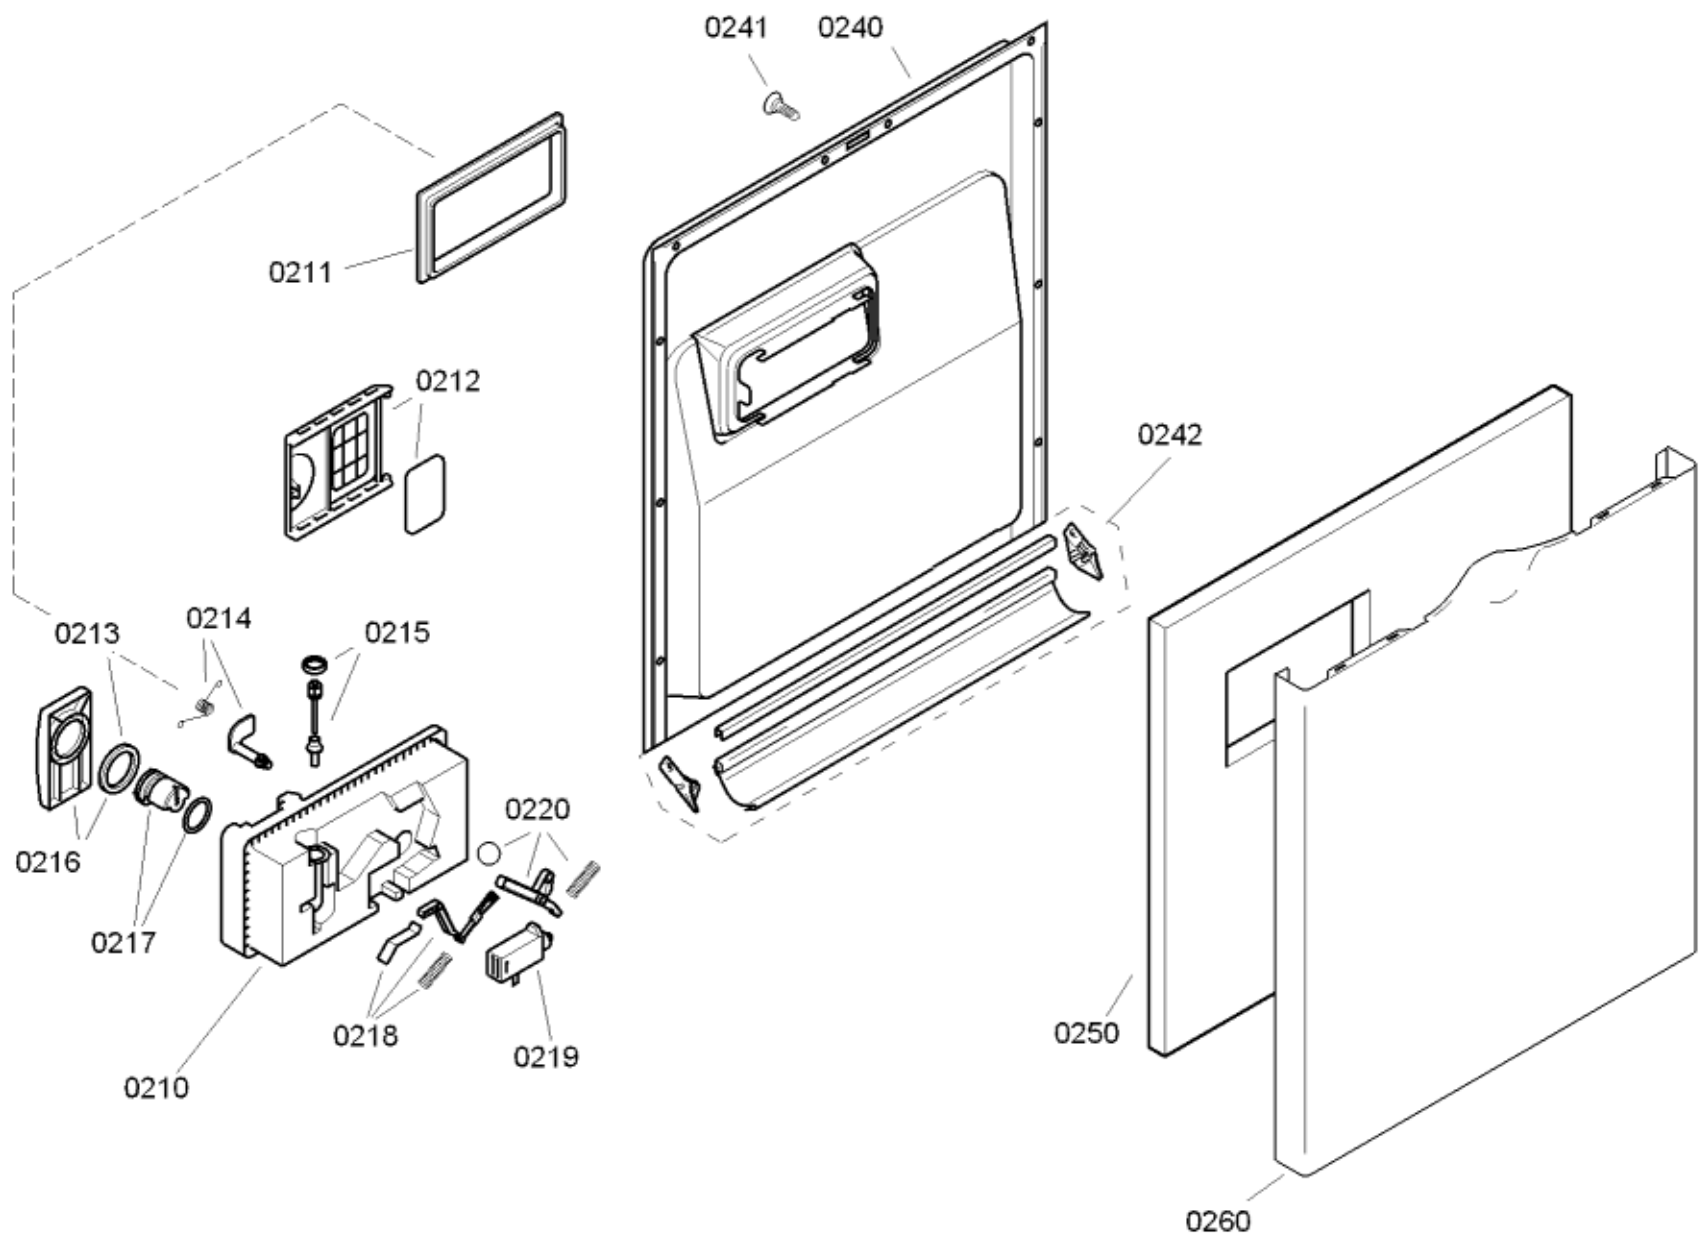

Position ID	Spare part no.	Replacement	Description
0210	00490467		Dispenser
0211	00166621		Lid
0211	00166637		Sealing
0213	00166625		Sealing
0214	00166630		Tripping device
0215	00166627		Plunger
0216	00166623		Lid
0217	00166626		Adjusting device
0218	00166632		Repair-set
0219	00166635		Actuator
0220	00166628		Repair-set
0240	00212855		Door-inner
0241	00151703		Screw
0242	00298534		Seal-door
0250	00299022		Insulating plate
0260	00478557		Door-outer
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions
0212	00166621		Lid

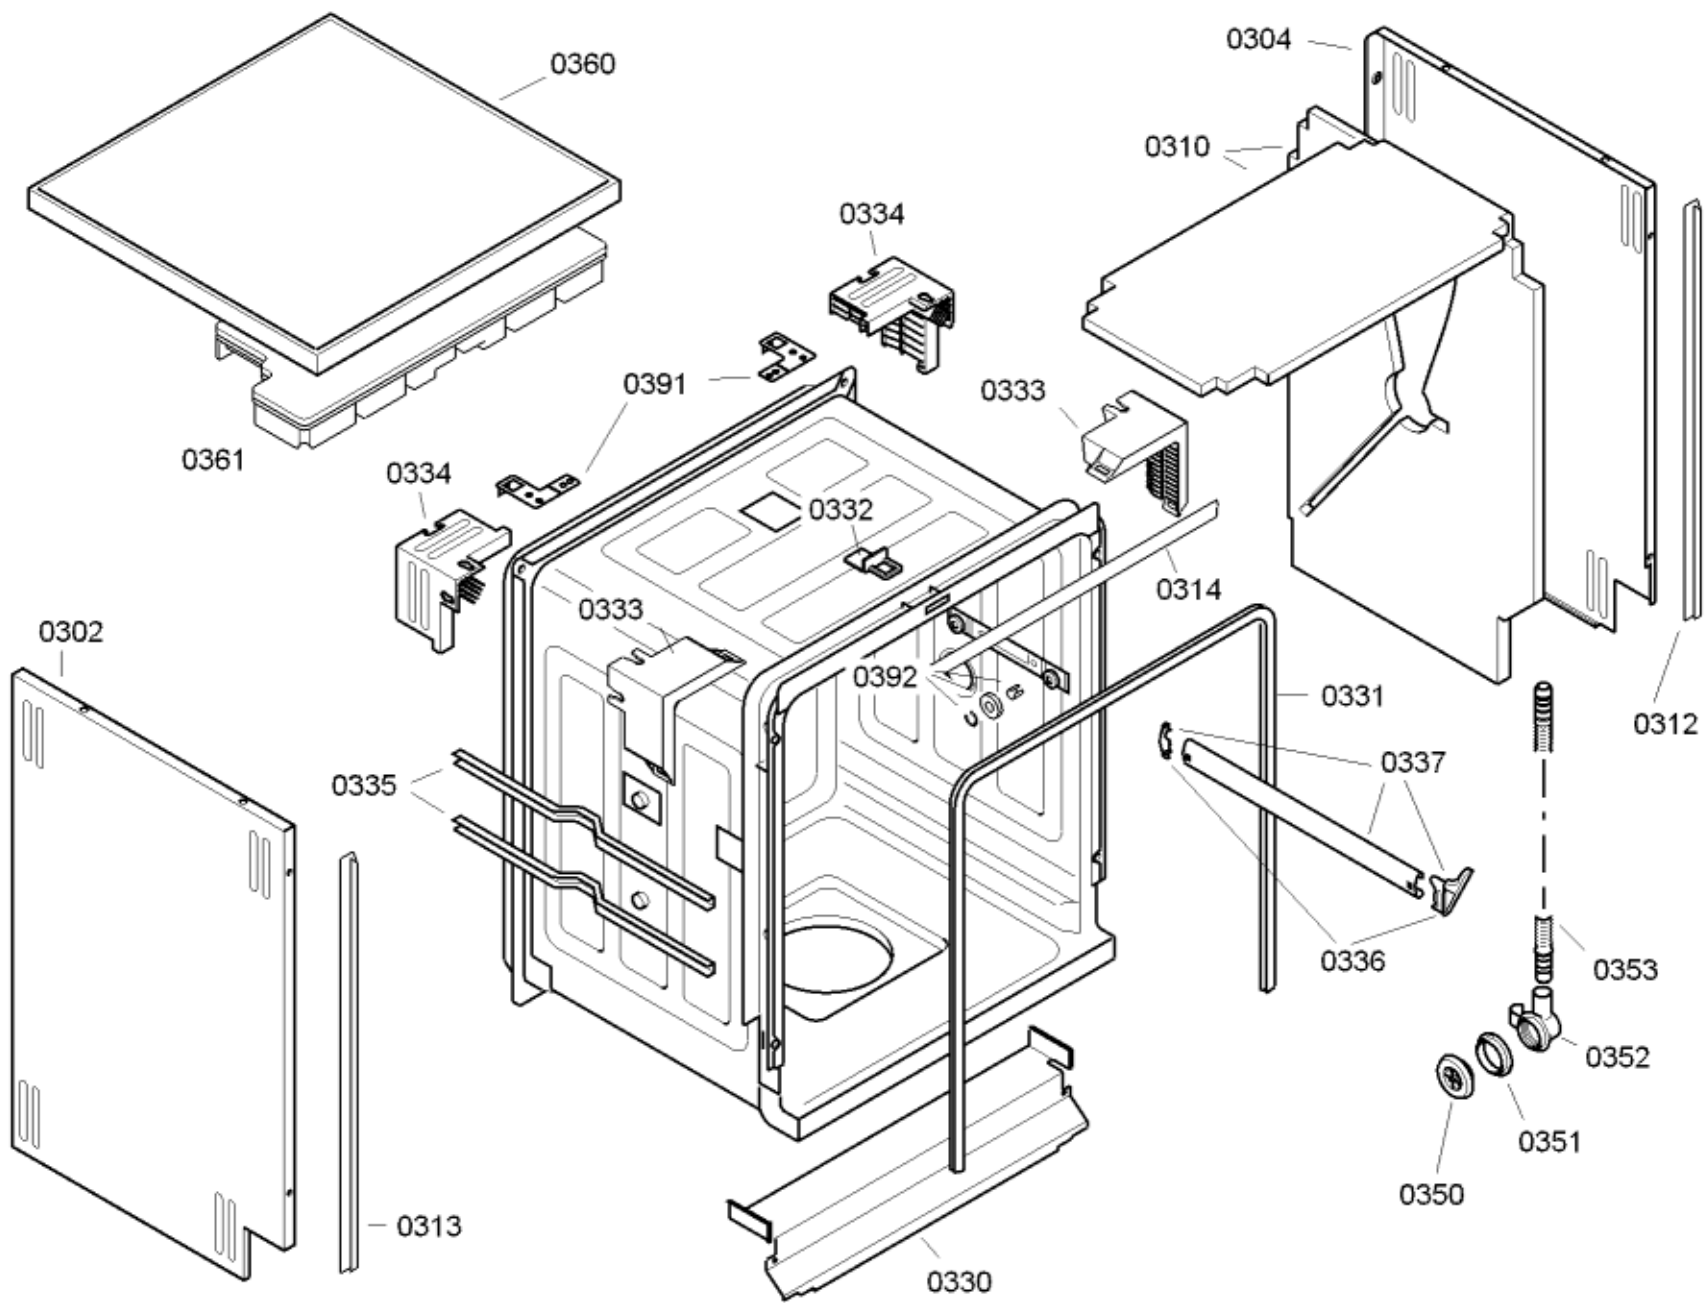

Position ID	Spare part no.	Replacement	Description
0302	00474602	00683932	Panel side
0304	00474603	00683933	Panel side
0310	00552829		Baking Stone
0312	00552829		Baking Stone
0313	00552829		Baking Stone
0314	00298550		Strip
0330	00298611		Rail
0331	00263096		Seal-door
0332	00187185		Latch
0333	00263094		Holder
0334	00263093		Holder
0335	00357074		Rail
0336	00165254		Holder
0337	00298547		Rail
0350	00066400		Cover
0351	00029952		Sealing
0352	00171024		Cover
0353	00265832		Hose-vent
0361	00141771	00144227	Weight
0391	00170664		Fixing kit
0392	00169467	00622193	Repair set-role
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions

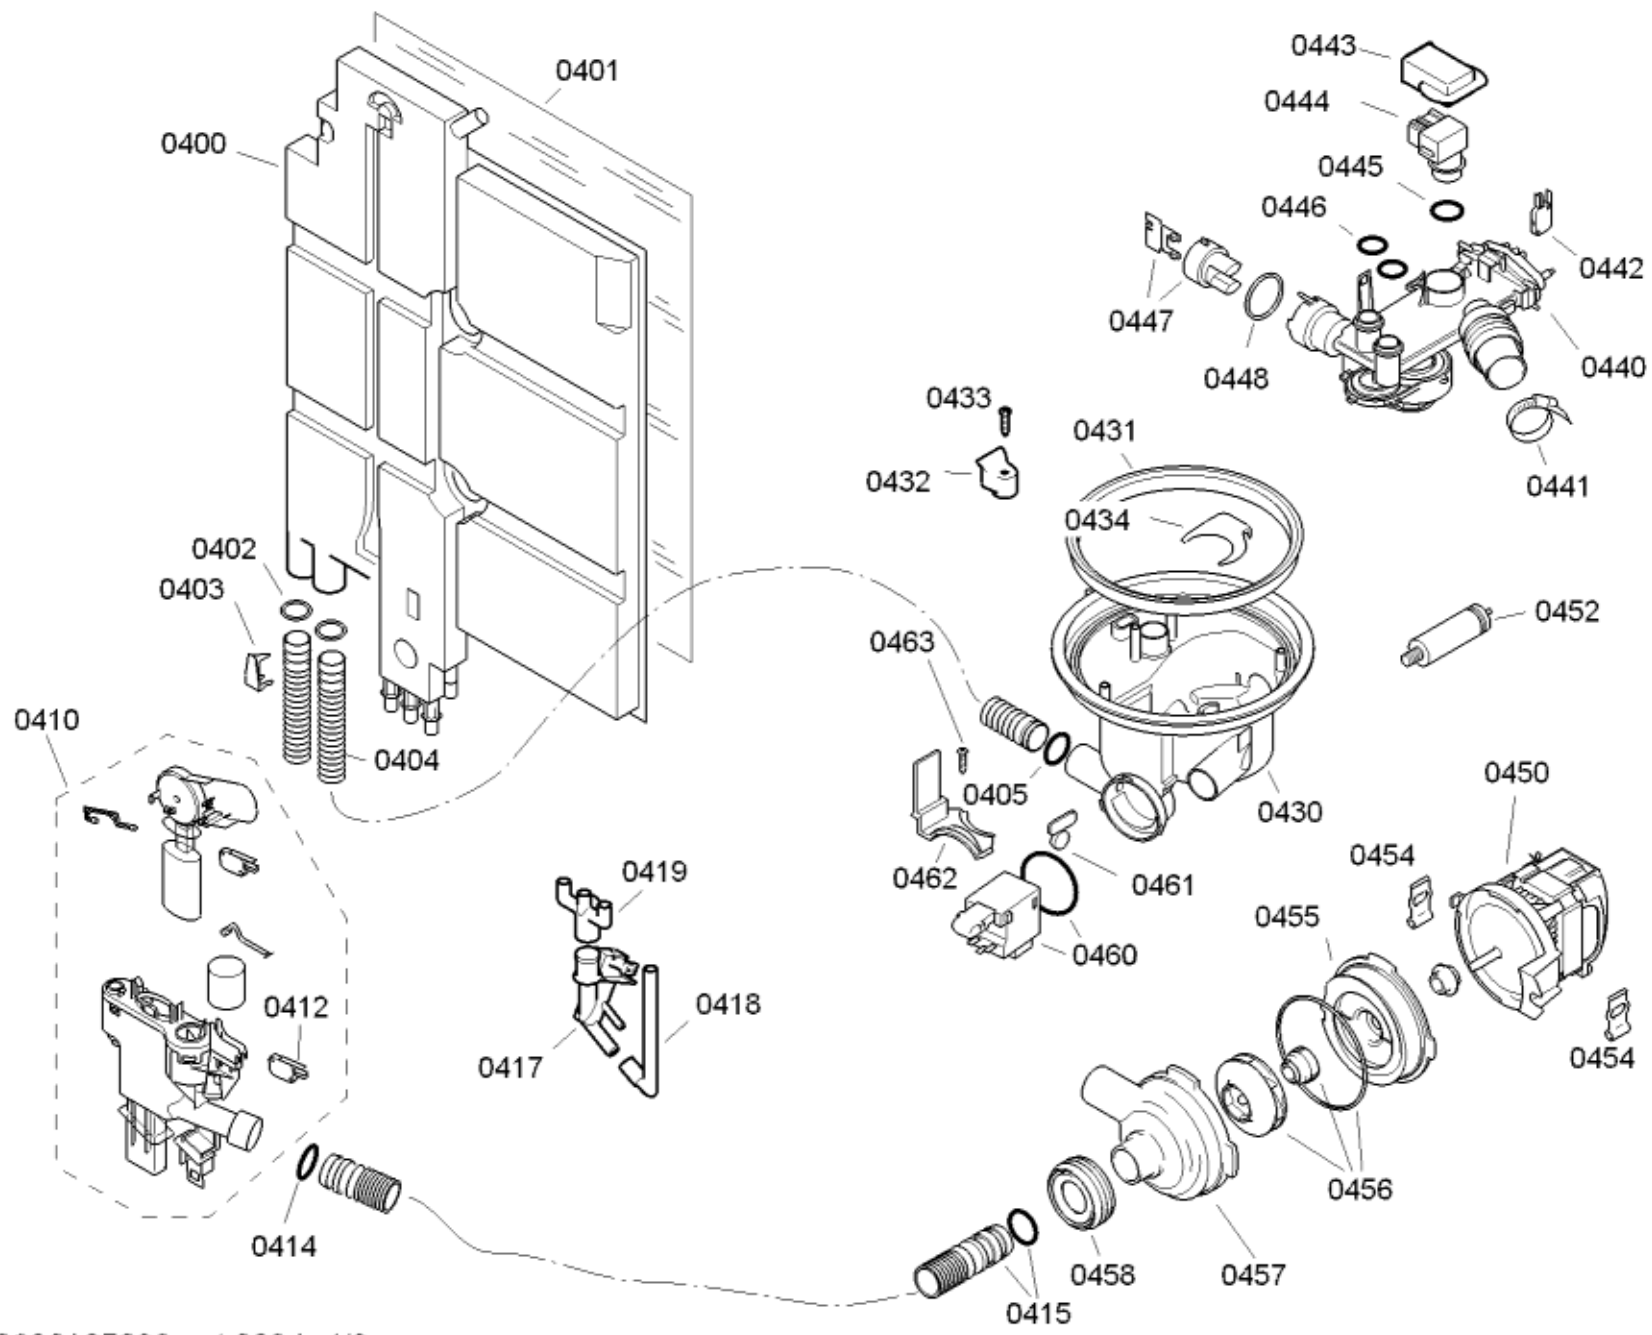 


Position ID	Spare part no.	Replacement	Description
0400	00216452		Heat exchanger
0401	00267631		Cover
0402	00165331		Sealing
0403	00167028		Fixture
0404	00263099		Hose
0412	00165256		Switch
0414	00165331		Sealing
0417	00168653		Valve-outlet
0418	00168652		Hose-fill
0419	00168651		Branching piece
0430	00499830	00643045	Sump
0431	00263102		Sealing
0432	00165265		Holder
0434	00171681		Cover
0440	00498623		Instantaneous water heater
0441	00172272		Hose clamp
0442	00069796		Switch
0443	00165284		Cover
0444	00165281		Sensor-NTC
0445	00151866		Sealing
0446	00165280		Sealing
0447	00165279		Sensor
0448	00165278		Sealing
0450	00645222		Motor
0452	00416450		Capacitor
0454	00171596		Suspension
0455	00481563		Pump-housing

0456	00419027		Sealing kit
0457	00481562		Case-upper part
0458	00171598		Sealing
0460	00165261		Pump-drain
0461	00165262		Valve-non return
0462	00165263		Cover
0463	00167241		Screw
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions

Position ID	Spare part no.	Replacement	Description
0500	00299756		Aquastop
0501	00166671		Sealing
0502	00263789		Valve-aquastop
0503	00067776		Cable connector
0510	00666148		Drain hose
0511	00165286		Stress-relief
0520	00473052		Case-bottom
0521	00609843		Foot
0522	00173696		Spring
0523	00167243		Hood
0524	00165301		Float
0525	00263123		Lever
0526	00263122		Tube
0527	00439273		Base
0528	00435488		Panel
0529	00552829		Baking Stone
0535	00498263		Power cord
0540	00600233		Capacitor-interference suppre.
0550	00298567		Hinge
0551	00165298		Roller-tension
0552	00165296		Bearing
0553	00263115		Hinge
0554	00165292		Plate
0560	00298570		Hinge
0561	00165298		Roller-tension
0562	00165296		Bearing
0563	00263119		Hinge

0564	00165295		Plate
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions

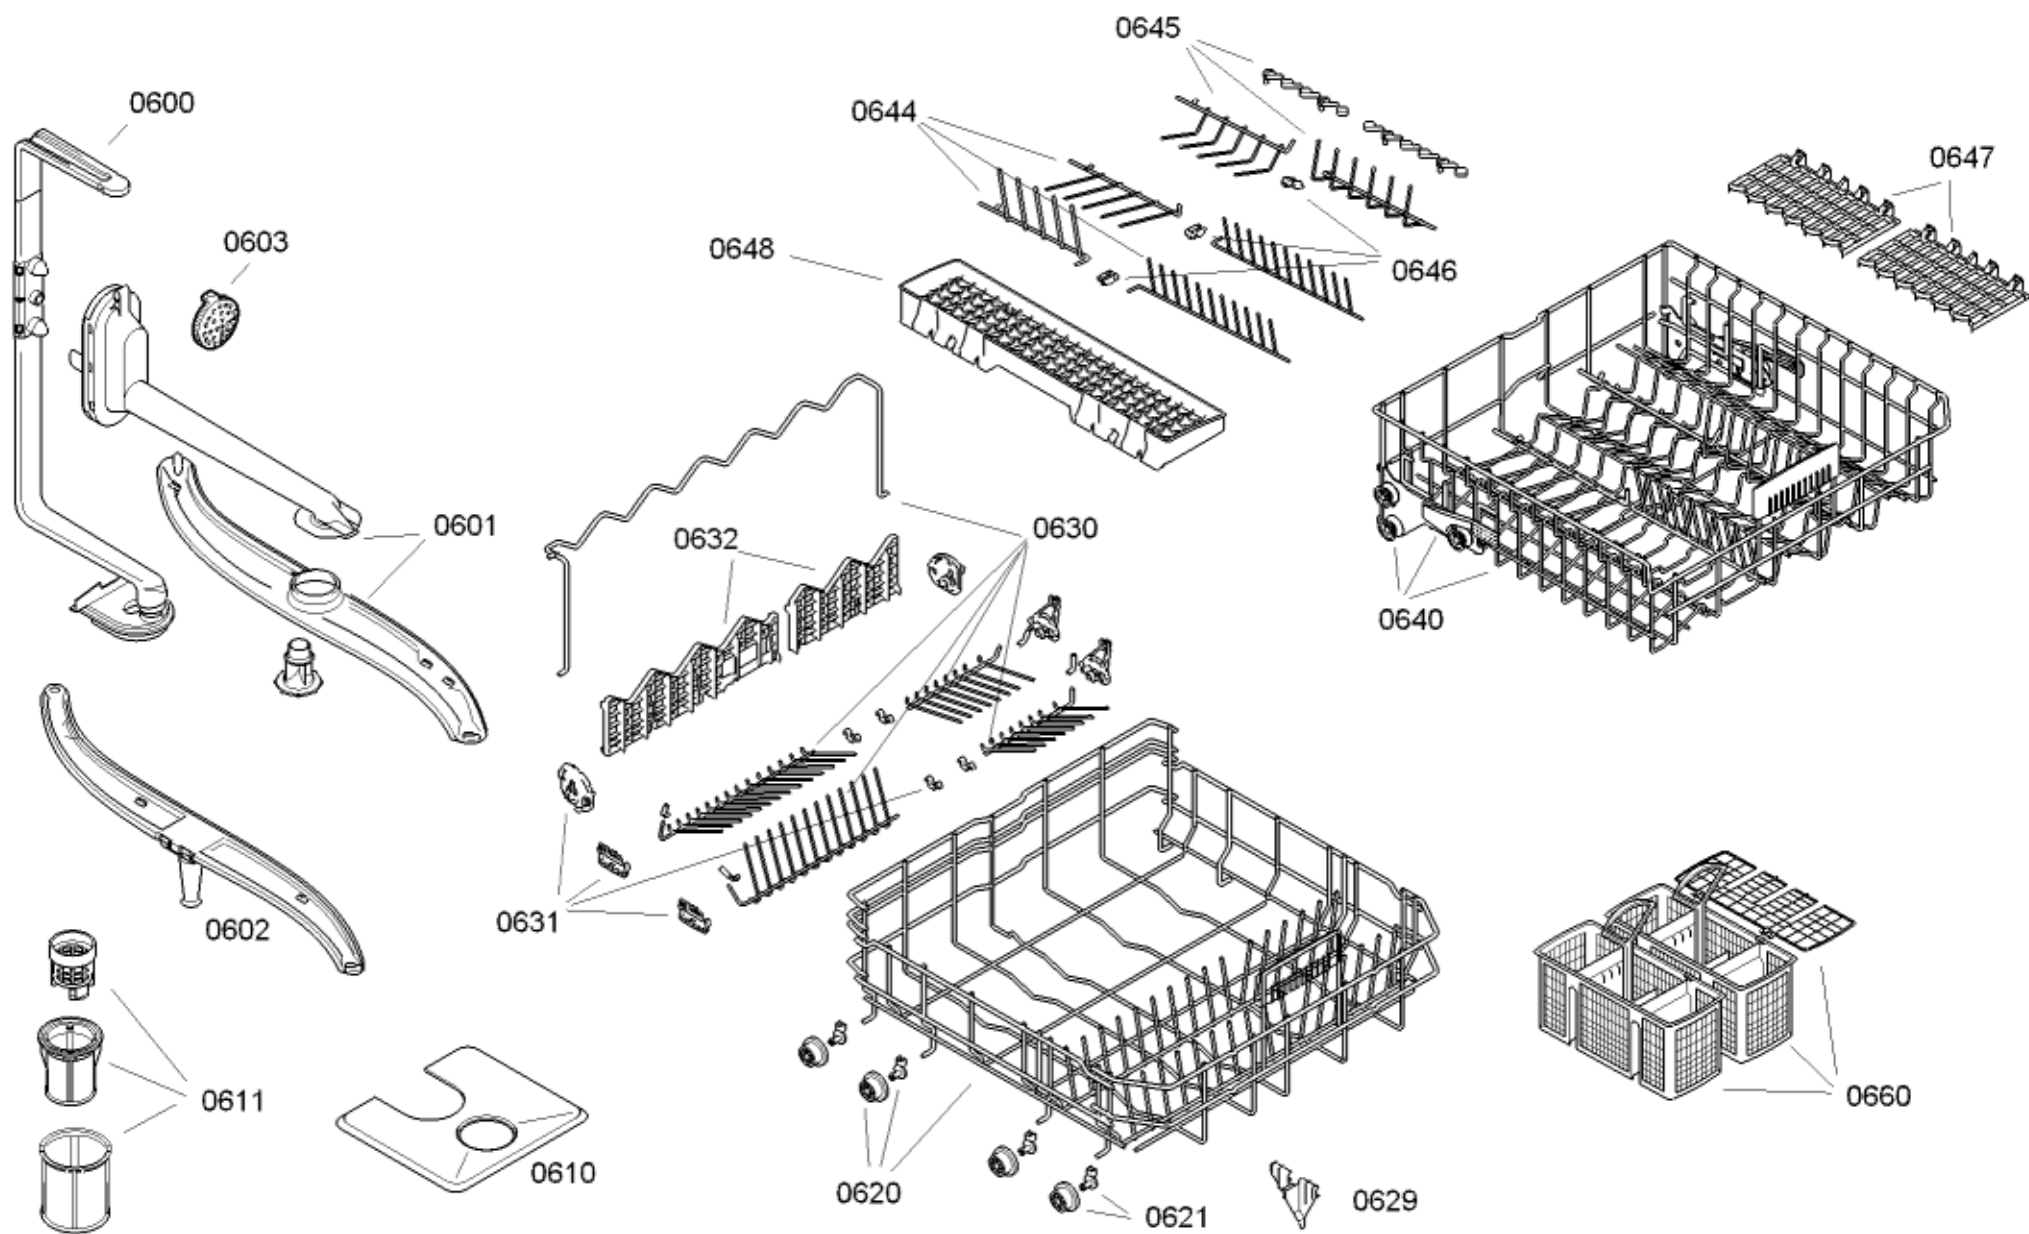 

Position ID	Spare part no.	Replacement	Description
0600	00448808		Tube
0601	00298594		Spray arm
0602	00448806		Spray arm
0610	00357393		Filter-fine
0611	00427903		Filter-micro
0620	00239504	00680997	Crockery basket
0621	00165314		Wheel
0632	00489468		Cup rack
0640	00239503	00770441	Crockery basket
0644	00489467		Insert
0645	00489466		Insert
0646	00418674		Bearing
0647	00093044		Cup rack
0648	00363436		Insert
0660	00489464	00418280	Cutlery basket
8001	00460038	00311506	Descaler
8100	00428216		Filter-micro
8400	00540484		Installation instructions
0640	00648570		Adjusting device
0631	00428344		Bearing
0630	00443403		Insert